

## INSTRUCTIONS FOR INSTALATION


CZ 75 SP01, SHADOW, FADOM, ORANGE, NEW TS.

Video: <https://dpmsystems.com/en/faqs/cz75sp01/>


1. Insert one External spring on the Recoil Rod and place it into the slide. **FIG 1**




2. Continue pushing the Recoil Rod from the back side. **FIG 2**

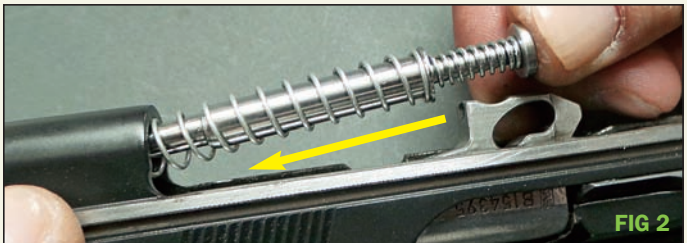


3. Finally push the recoil rod, until the front side pass the slide hole and press down to lock the back side of the rod on the barrel link. **FIG 3**

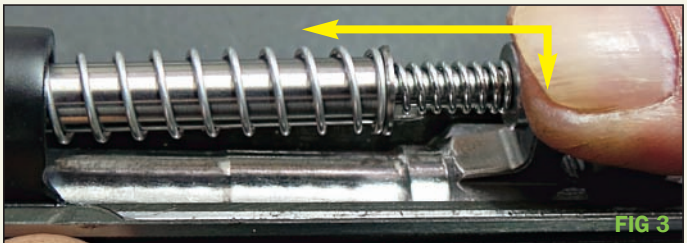

4. To remove the recoil rod, push it back and up, to be ready for the next step. FIG 4

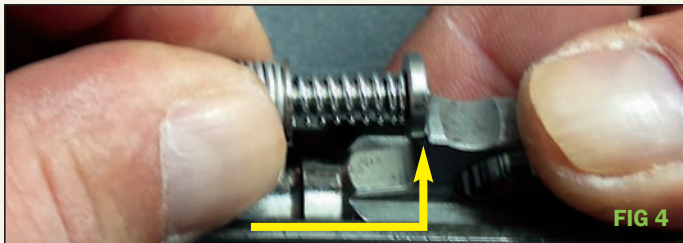

5. Push simultaneously back and front to compress the recoil rod and pull it up to be released from the barrel link. FIG 5

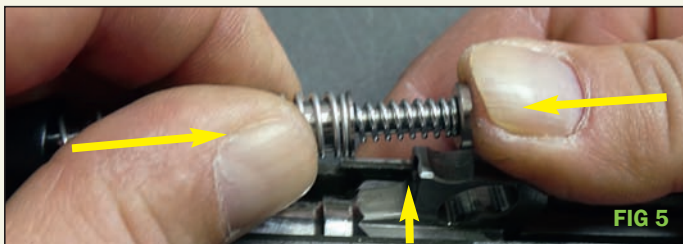

6. The DPM recoil rod includes 4 external springs. The two long springs have wire diameter 0.9mm (soft slide function). The two short springs have wire diameter 1.0 mm (hard slide function). FIG 6

